


CHUCKS

SCROLL CHUCKS

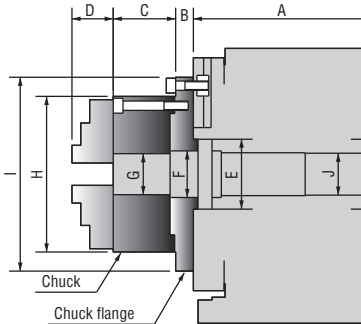

Scroll Chucks	
Chuck Size (inches)	Chucking Range (mm)
6" Manual 3-Jaw Chuck	3 ~ 127
8" Manual 3-Jaw Chuck	5 ~ 165
10" Manual 3-Jaw Chuck	10 ~ 200
12" Manual 3-Jaw Chuck	11 ~ 254
15" Manual 3-Jaw Chuck	15 ~ 380

Notes 1. The values in the table above are dimensions with hardened jaw (soft blank jaw is optional).
 2. Occasionally a workpiece within the chucking range can not be chucked due to jaw configuration.

SCROLL CHUCK MOUNTING DIMENSIONS

Dimensions = mm

Rotary Table Model	Chuck Size (inches)	A	B	C	D	E	F	G	H	I	J
RN-100	5	145	15	60	37.3	50	50	32	132	132	30
TWA-130	5	210	18	60	37.3	55	45	32	132	132	35
RWE-160, RWA-160 RWE-160 TPC	6	155	-	60	39	55	40	39	152	-	40
TWA-160	6	235	-	60	39	55	45	39	152	-	40
RWE-200 RWA-200 RWE-200 TPC	8	165 175 (RWE-200 TPC)	-	80	53	65	45	60	210	-	45
TWA-200	8	270	-	80	53	65	55	60	210	-	45
RWE-250 RWA-250	10	190	-	86	66	75	50	73	254	-	50
RWB-250	10	195	-	86	66	70	71	73	254	-	71
RNCM-251	10	165	-	86	66	40	32	73	254	-	32
RWE-320 RWA-320	12	250	-	102	66	110	82	83	305	-	82
TN-320	12	355	-	102	66	105	95	83	305	-	102
RNCM-301	12	220	-	102	66	40	40	83	305	-	40
RWB-320	12	250	-	102	66	130	101	83	305	-	101
RNCM-401 RNCV-401	15	250 220 (RNCV-401)	-	147	90	40	40	108	381	-	40
RWB-400	15	257	35	100	70	190	151	150	385	400	151
RWB-500	18	325	35	114	79.8	220	165	180	460	500	220

Notes 1. The dimensions above are for reference only.
 2. Specifications subject to change without notice.